


Why Dreamcatchers?

The dreams are infinite! Resize the wand to increase the speed and response of the wires and the attack of the wand.

Play the wand on the top side of the wires of flip over to come in immediate contact with your cymbals or drums.

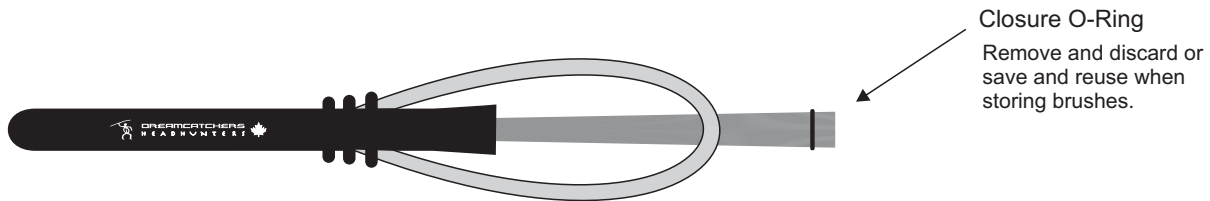

Resizing the wand: Release the O-rings back, this allows the wand to slide in or out of the handle. Do this on both sides on the handle. When you have the wand at the desired size slide the O rings forward. This will secure the wand at the chosen size. Play and catch your dreams!

